

BLOWER UNIT MAINTENANCE

The plug kit is used for sealing during blower unit maintenance.

- Do not soak or immerse the blower unit in water.
- Remove the hose and securely seal the air outlet using the outlet sealing plug.
- Open the filter cover and remove the filter cartridges. Seal the air inlet with the inlet sealing plug.
- Wipe the interior of the blower unit with a clean, dry cloth.
- After cleaning, remove the sealing plugs and store them safely for future use.

